
H&S 7' & 8' HAY TEDDERS

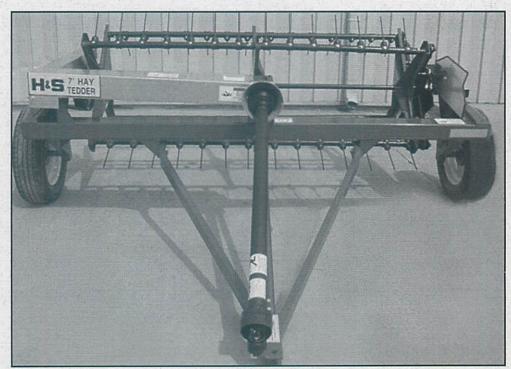



WARNING READ AND UNDERSTAND THIS MANUAL BEFORE OPERATING THIS EQUIPMENT.

UNSAFE OPERATION OR MAINTENANCE OF THIS EQUIPMENT CAN RESULT IN SERIOUS INJURY OR DEATH.

OPERATOR'S MANUAL and PARTS LIST

01-15-08

Manufactured By

H&S MANUFACTURING CO., INC.

P.O. BOX 768 • (715) 387-3414 FAX (715) 384-5463 MARSHFIELD, WISCONSIN 54449

H&S

7' & 8' HAY TEDDERS OPERATOR'S AND PARTS MANUAL

CONTENTS

Warranty & Warranty Registration Card	1-2
Dealer Pre-Delivery & Delivery Checklist	3
Be Alert Symbol	5
Explanation of Safety Signs	6
Danger and Warning Decals	7
Warning - Owner Must Read and Understand	
Operation and Adjustments	
Lubrication Guide	Programme of the contract of t
Decal Location and Identification	
Ordering Parts	13
Figure 1 Frame and Shields - Description	14-15
Figure 2 Cam and Belt Drive Assembly - Description	
Figure 3 Bevel Gear Box - Description	
Figure 4 PTO Parts - Description (2005 Only)	and the second
Figure 5 PTO Parts - Description (Beginning w/2006 Model)	
Specifications	

WARRANTY

Mr. Owner: Before Operating-Read and Understand Operating and Safety Instructions

H&S Manufacturing Co., Inc. truly believes you have made a wise choice and a sound and lasting investment. Many years of development have made available these quality machines to assure you the performance and reliability you need. We ask you to read the following agreement and warranty as this unit is subject to this warranty and agreement and no other.

(decidered action of the contract of the contr

H&S Manufacturing Co., Inc. ("H&S") warrants this product to be free from defect in material and workmanship. Except as noted below, this warranty term is twelve (12) months from the date of delivery of the product to the original purchaser by an authorized H&S dealer. Under this warranty, H&S will repair or replace, at its option, any covered part which is found to be defective in material or workmanship during the applicable warranty term. In no case will the covered repair cost of a part or parts exceed the replacement cost of that part. Warranty service must be performed by H&S or a dealer authorized by H&S to sell and/or service the product involved, which will use only new or remanufactured parts or components furnished by H&S. This warranty includes approved parts and labor to fix the product but does not include, and the purchaser is responsible for, any service call and/or transportation of the product to and from the dealer's place of business, for any premium charged for overtime labor requested by the purchaser, and for any service work not directly related to any defect covered under this warranty. This warranty includes only those components of the product manufactured by H&S. Warranty for any component not manufactured by H&S including, but not limited to, engines, batteries, tires, rims, hydraulic motors, pumps, etc. are covered by the warranty, if any, provided separately by their respective manufacturers.

This warranty in all its parts, is extended solely to the original purchaser of the product, is terminated upon any subsequent transfer or sale from or by the original purchaser and extends no third party benefits or rights whatsoever.

The warranty term for any product used in any commercial, custom, for hire or rental application, is limited to six (6) months from the date of delivery of the product to the original purchaser by an authorized H&S dealer.

Polybonded (polyethylene and plywood) panels utilized in H&S Manure Spreaders are warrantied, to the original purchaser, to not wear through and the polyethylene overlay to not tear free of the plywood for the functional life of the spreader. This specific warranty on polybonded panels includes only replacement of any defective panel part without any allowance for labor beyond the terms of the general warranty (12 or 6 months), and is further limited to manure spreaders used to spread normal agicultural manure.

This warranty does not include: (1) Any product that has been altered or modified in ways not approved by H&S; (2) Depreciation or damage caused by normal wear, misuse, improper or insufficient maintenance, improper operation, accident or failure to follow the product Operator's Manual recommendations and product decal recommendations; (3) Normal maintenance parts and service; (4) Repairs made with parts other than those available from H&S or performed by anyone other than H&S or a dealer authorized by H&S to sell and/or service the product involved.

To secure warranty service the purchaser must report the product defect to a dealer authorized by H&S to sell and/or service the product involved within the applicable warranty term together with evidence of the warranty start date and make the product available to that dealer within a reasonable period of time.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE OF THIS WARRANTY. H&S and the companies affiliated with it makes no warranties, representations, or promises, express or implied, as to the performance or freedom from defect of its products other than those set forth above and NO IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS OR FITNESS FOR A PARTICULAR PURPOSE IS MADE. IN NO EVENT WILL THE DEALER, H&S OR ANY COMPANY AFFILIATED WITH H&S BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. The ONLY REMEDY the purchaser has in connection with the breach of performance of any warranty on H&S products are those set forth above.

2/16/04

WARRANTY REGISTRATION

FILL OUT AND MAIL IMMEDIATELY TO MAKE WARRANTY EFFECTIVE



IMPORTANT!

Tear on dotted line, provide the information requested on the card. The H&S Warranty is valid "only" after this card is received and recorded at H&S Mfg. Co. Mail at once. No postage is required in the U.S.A.

This is Your Warranty Card Please Fill Out And Mail Immediately





NO POSTAGE NECESSARY IF MAILED IN THE UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS MAIL Permit No 195

Marshfield, WI 54449

POSTAGE WILL BE PAID BY ADDRESSEE

H&S Manufacturing Co., Inc.

PO Box 768 Marshfield WI 54449-9963

AFTER COMPLETION, DEALER SHOULD REMOVE AND RETAIN FOR RECORDS

H&S DEALER PRE-DELIVERY CHECK LIST

After Hay Tedder h						
the customer. The	as been completely set-up, check to following is a list of points to inspect ne item operating satisfactorily.		•			
☐ PTO Shields slide freely.						
	All grease fittings have been lubric	ated - See lubrication guide in th	nis manual.			
All mechanisms are operating trouble free.						
	Belts are properly adjusted.					
	All bolts and fasteners are tight.					
٥	All decals are in place, and legible					
	Dealer's Name	Model No.	Serial No.			
	(Signature of Pre-Delivery Inspector)		Date of Inspection			
		<u>/ERY</u> CHECK LIST	Date of Inspection			
			,			
tomer at the time the	DEALER DELIV		,			
tomer at the time the Check off each iter	DEALER DELING follows is an important reminder of this Hay Tedder is delivered. The as you explain it to the customer. The thick list, when properly filled out an important the customer.	valuable information that should	be passed on to the cus-			
tomer at the time the Check off each iter. This pre-delivery clice was satisfactoric	DEALER DELING follows is an important reminder of this Hay Tedder is delivered. The as you explain it to the customer. The thick list, when properly filled out an important the customer.	valuable information that should	be passed on to the cus-			
tomer at the time the Check off each iter. This pre-delivery clice was satisfactor.	DEALER DELING follows is an important reminder of this Hay Tedder is delivered. The as you explain it to the customer. The heck list, when properly filled out an illy performed.	valuable information that should disigned assures the customer that customer the customer the customer the customer the customer the customer the customer than the customer t	be passed on to the cus-			
tomer at the time the Check off each iter. This pre-delivery clice was satisfactor.	DEALER DELIVER OF DELIVER DELIVER FOR THE DELIVER FOR THE DELIVER DELI	valuable information that should disigned assures the customer the elivery inspection was made.	be passed on to the cus-			
tomer at the time the Check off each iter. This pre-delivery chice was satisfactoring.	DEALER DELIN follows is an important reminder of his Hay Tedder is delivered. In as you explain it to the customer. heck list, when properly filled out an ily performed. Explain to the customer that pre-defended by the customer all the safe this unit.	valuable information that should disigned assures the customer to elivery inspection was made. The entry precautions they must exercise material fluffing.	be passed on to the cus- hat the pre-delivery serv- se when operating peration and long life			
tomer at the time the Check off each iter. This pre-delivery chice was satisfactoring.	DEALER DELINATION OF THE PROPERTY OF THE PROPE	valuable information that should disigned assures the customer to elivery inspection was made. The precautions they must exercise material fluffing. The brication is required for proper operication section of Owner's Man	be passed on to the cushat the pre-delivery serv-se when operating peration and long life ual.			
tomer at the time the Check off each iter. This pre-delivery chice was satisfactoring.	DEALER DELINATION of this Hay Tedder is delivered. In as you explain it to the customer. Theck list, when properly filled out an illy performed. Explain to the customer that pre-deception in the customer all the safe this unit. Explain the adjustment for proper in Explain to customer that regular lung of machine. Show customer the lung Give customer Owner's Manual and the safe that regular lung for the customer of the lung for the lung	d signed assures the customer to elivery inspection was made. ety precautions they must exercise material fluffing. brication is required for proper of prication section of Owner's Man d make sure he reads and unde	be passed on to the cushat the pre-delivery serv-se when operating peration and long life ual.			
tomer at the time the Check off each iter. This pre-delivery chice was satisfactoring.	DEALER DELIVITION of follows is an important reminder of this Hay Tedder is delivered. In as you explain it to the customer. Theck list, when properly filled out antily performed. Explain to the customer that pre-defends this unit. Explain the adjustment for proper in Explain to customer that regular lung of machine. Show customer the lulus Give customer Owner's Manual and and service instructions. Enter Serial Number on Page 13 of this Hay Tedder.	valuable information that should disigned assures the customer the elivery inspection was made. The precautions they must exercise material fluffing. The brication is required for proper operication section of Owner's Mandamake sure he reads and under this manual.	be passed on to the cushat the pre-delivery serv-se when operating peration and long life ual.			

Signature of Original Buyer



BE YOUR SAFETY ALERT! IS INVOLVED.

THIS SYMBOL IS USED THROUGHOUT THIS BOOK WHENEVER YOUR PERSONAL SAFETY IS INVOLVED. TAKE TIME TO BE CAREFUL. REMEMBER: THE CAREFUL OPERATOR IS THE BEST OPERATOR. MOST ACCIDENTS ARE CAUSED BY HUMAN ERROR. CERTAIN PRECAUTIONS MUST BE OBSERVED TO PREVENT THE POSSIBILITY OF INJURY OR DAMAGE.

TRACTORS

This operator's manual uses the term "Tractor" when identifying the power source for the Hay Tedder.

H&S MANUFACTURING CO., INC.

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



UNDERSTAND SIGNAL WORDS

A signal word –DANGER, WARNING, or CAUTION– is used with the safety-alert symbol.

DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs.









FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual, and all safety signs on your machine. Follow all recommended precautions and safe operating procedures.

Keep signs in good condition. Immediately replace any missing or damaged signs.





ROTATING DRIVELINE CONTACT CAN CAUSE DEATH KEEP AWAY!

DO NOT OPERATE WITHOUT-

- ALL DRIVELINE, TRACTOR AND EQUIPMENT SHIELDS IN DI ACE
- DRIVELINES SECURELY ATTACHED AT BOTH ENDS.
- DRIVELINE SHIELDS THAT **TURN FREELY ON DRIVELINE**



A DANGER

STAY CLEAR OF REEL AND ALL ROTATING PARTS WHEN TRACTOR IS RUNNING OR PTO IS ENGAGED. FAILURE TO HEED MAY RESULT IN SERIOUS INJURY OR DEATH.

A DANGER DO NOT SHIFT LEVER WHEN TRACTOR IS RUNNING OR PTO IS ENGAGED.

▲WARNING



DO NOT CLEAN OR WORK ON THIS **MACHINE WITHOUT** FIRST DISENGAGING **POWER AND SHUTTING OFF** TRACTOR ENGINE.



DO NOT REMOVE SHIELDS **MOVING PARTS** INSIDE

⚠ WARNING

FAILURE TO HEED MAY

RESULT IN SERIOUS INJURY OR DEATH.



DO NOT OPERATE THIS **EQUIPMENT IF THIS DECAL** IS EXPOSED. REPLACE SAFETY SHIELDS. FAILURE TO HEED MAY RESULT IN SERIOUS INJURY OR DEATH

▲WARNING

HELP AVOID INJURY

- READ & UNDERSTAND THE OPERATORS MANUAL PROVIDED WITH THIS MACHINE. IF MISPLACED CALL H & MANUFACTURING AT 775-387-3414 WITH MODEL AND SERIAL NUMBER. IF MISPLACED CALL H & S
- UNDERSTAND ALL SAFETY WARNINGS AND FUNCTION OF CONTROLS.
- KEEP SAFETY DEVICES IN PLACE AND WORKING
- KEEP YOURSELF AND OTHERS WELL CLEAR OF MOVING PARTS.
- DISCONNECT ALL POWER BEFORE SERVICING OR CLEANING THIS MACHINE.
- DO NOT EXCEED 20 MPH

72203A



A WARNING DO NOT REMOVE **SHIELDS ROTATING PARTS** INSIDE

12794

KEEP CHILDREN AWAY AT ALL TIMES!

H&S HAY TEDDER



WARNING

TO PREVENT SERIOUS INJURY OR DEATH

BEFORE YOU ATTEMPT TO OPERATE THIS EQUIPMENT, READ AND STUDY THE FOLLOWING INFORMATION. IN ADDITION, MAKE SURE THAT EVERY INDIVIDUAL WHO OPERATES OR WORKS WITH THIS EQUIPMENT, WHETHER FAMILY MEMBER OR EMPLOYEE, IS FAMILIAR WITH THESE SAFETY PRECAUTIONS.

KNOW HOW TO STOP MECHANISM BEFORE STARTING IT

If the machine becomes clogged, <u>disengage the Power Take-off. Stop the tractor engine and allow all mechanisms to stop</u> before cleaning or working on the machine.

DO NOT attempt to perform maintenance or repair with tractor running or PTO hooked up.

DO NOT step up on machine at any time.

NEVER manually feed material into the reel.

DO NOT allow minors to operate or be near the machine.

DO NOT ALLOW PERSONNEL OTHER THAN THE QUALIFIED OPERATOR NEAR THE MACHINE.

Before starting tractor, be sure PTO shields slide freely and PTO is securely locked to tractor.

DO NOT clean, adjust, or lubricate the machine when any part is in operation.

Keep hands, feet, and clothing away from REEL WHEN IT IS REVOLVING.

Loose or floppy clothing should not be worn by the operator.

Be sure the machine is clear of people, tools, and other objects before engaging PTO.

NEVER start Hay Tedder until all guards and safety shields are secured in place.

DO NOT adjust reel when machine is running.

DO NOT adjust ground height with the tractor running.

NEVER hook up 1000 RPM tractor to the Hay Tedder.

H&S Mfg. Co. always takes the operator and his safety into consideration and guards exposed moving parts for his protection. However, some areas cannot be guarded or shielded in order to assure proper operation. In addition, the operator's manual and decals on the machine itself warn you of further danger and should be read and observed closely.

Study the Above Safety Rules ATTENTION-BE ALERT-YOUR SAFETY IS INVOLVED

FIELD OPERATION

Your H&S Tedder delivers outstanding ground speed and yet gently fluffs up the hay. The height of hay pitching can be regulated by moving the adjustment lever (eight different settings), located on the left hand side of the Tedder.



↑ DANGER

DO NOT SHIFT LEVER WHEN TRACTOR IS RUNNING OR PTO IS ENGAGED.

FAILURE TO HEED MAY RESULT IN SERIOUS INJURY OR DEATH.

Adjustment Lever



While using your H&S Tedder, which is capable of tedding quickly and efficiently, you might want to change the adjustment lever to


make it more efficient. As various conditions will effect the efficiency of your Tedder, only with experience will you know how to properly adjust the Tedder. Field conditions, weather conditions, and type and size of windrow or swath are some of the determining factors for proper teeth adjustment, height adjustment, and PTO and ground speed to make your Tedder most efficient in gently picking up and fluffing all the hay.

HEIGHT ADJUSTMENT

Located between hitch and gearbox mount is the height adjustment rod. This adjustment controls the height of the reel in relation to the ground. Shortening adjustment rod will raise reel, while lengthening it will lower it. A convenient handle is provided to turn adjustment rod.




WORK ON THIS
MACHINE WITHOUT FIRST DISENGAGING POWER
AND SHUTTING
OFF TRACTOR
ENGINE.

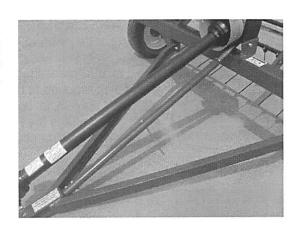

ADJUSTMENTS

- The V-Belts absorb shock and prevent damage to the machine should the reel strike an obstruction. Adjust the belts by loosening the two bearing mounting bolts (A) on each end of the reel. Turn the adjusting bolts (B) on each side of the Tedder equally so the reel runs parallel with the frame. Adjust the belt to about 1/2 inch deflection. Then secure the reel bearing bolts tightly to the frame.
- 2. To adjust the wheel hubs, tighten the castellated nut on the spindle to the point where there is no end play and a slight drag on the bearing.

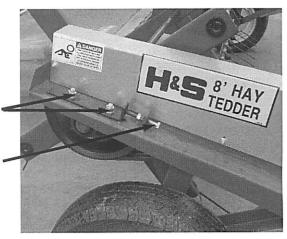

FIELD OPERATION (Continued)

PTO HOLDER

A convenient bracket is provided to hold PTO when Tedder is not in operation.Locking PTO onto holder will also prevent reel from turning during road travel.

LUBRICATION

The operator should become familiar with all lubrication points, and establish a systematic routine to insure complete and quick lubrication of the machine. Life expectancy of this or any other machine is dependent on regular maintenance including lubrication, and bolt torque



WARNING



DO NOT CLEAN OR WORK ON THIS MACHINE WITH-**OUT FIRST DISEN-GAGING POWER** AND SHUTTING OFF TRACTOR ENGINE.

GEAR BOX


Before using your new machine, check the oil in the gear box, keep filled to the center of the shafts. Use 80W-90W gear lube.

Both wheel axle bearings have been packed with grease at the factory. However, they should be checked periodically to insure proper operation.

PTO ASSEMBLY

Care must be taken to keep the male and female driving elements well lubricated and free sliding. Failure to observe this precaution will result in excessive pressure being required to collapse and extend the assembly while subject to operating torque. This excessive

force may damage the PTO assembly. DO NOT lubricate the shield surfaces, the shields must be kept dry, as dirt accumulation on them will cause these units to bind and not slide.

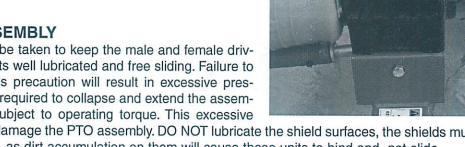

A DANGER



ROTATING DRIVELINE CONTACT CAN CAUSE DEATH KEEP AWAY!

DO NOT OPERATE WITHOUT-

- ALL DRIVELINE, TRACTOR AND EQUIPMENT SHIELDS IN PLACE.
- DRIVELINES SECURELY ATTACHED AT BOTH ENDS.
- DRIVELINE SHIELDS THAT TURN FREELY ON DRIVELINE.


GREASE FITTINGS

There are 33 grease fittings on this machine. If these are lubricated properly and often enough it will prolong the life of the Tedder. Grease daily during normal use, and before and after storage. Use a good grade of high quality grease, make certain that the grease fittings are free of paint and dirt. Grease them until grease comes out around the shaft on the sleeve type bearings. On the sealed ball bearings, grease should be added slowly until a slight bead forms at the seals indicating the correct amount of lubricant. Wipe off the excess grease to prevent the accumulation of chaff and grit around the bearings.

LOCATION OF GREASE FITTINGS (Illustrated on opposite page)

- A. (2) One at each end of PTO at U-joint
- C. One on hitch adjustment rod
- D. One on front jack shaft (sealed bearing)
- E. (2) One at each end of reel main shaft (sealed bearing)
- F. (12) One at end of each arm of each reel cross
- G. (12) Three on each set of cam arms
- H. One on cam center bearing

GREASE FITTING LOCATION

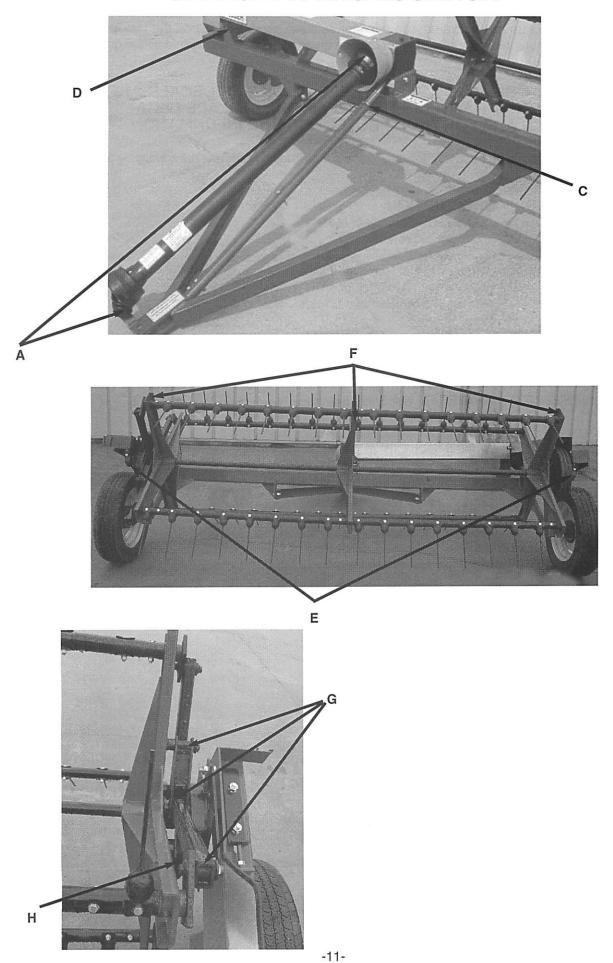

DECAL LOCATION


Your H&S Hay Tedder was manufactured with operator safety in mind. Located on the Hay Tedder are various decals to aid in operation, and warn of danger or caution areas. Pay close attention to all the decals on your Hay Tedder.





DO NOT REMOVE ANY OF THESE DECALS. IF DECALS ARE LOST, DAMAGED, OR IF HAY TEDDER IS REPAINTED, REPLACE DECALS. REMEMBER: DECALS ARE FOR YOUR PROTECTION AND INFORMATION.

Listed below are the decals on your Hay Tedder. These decals may be ordered individually by part number or by ordering a complete set.

ITEM	PART NO.	DESCRIPTION (4) PANOTE Start Clean of Book
A B	12494D	(4) DANGER-Stay Clear of Reel
В	1787C	(2) 7' Hay Tedder
<u> </u>	1787D	(2) 8' Hay Tedder
C D	1494K	Warning-Do Not Remove Shields
E	72203A	Warning-Help Avoid Injuries
F	12794	Warning-Do Not Remove Shields
	17070	Serial Number
G	1787G	PTO Holder
H	2.727.72	WEASLERDANGER-PTO (H&S Decal 1494L)
1	1494J	Warning-Do Not Clean
J		Amber Reflector
K	12494E	DANGER-Do Not Shift Lever
L		(2) Red Reflector
M	3894	Warning-Do Not Operate
N	2495	Warning-Keep Children Away
	11604-7	Complete Set of Decals-7' Tedder
	11604-8	Complete Set of Decals-8' Tedder
Paint - H&S	S Red	
	ZX21	Gallon
	ZX22	Quart
	ZX23	Pint

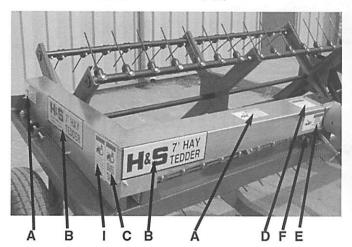

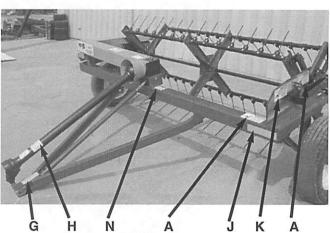


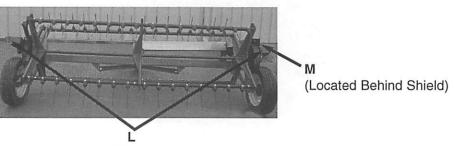

Instructions for Ordering Parts

All service parts should be ordered through your H&S dealer. He will be able to give you faster service if you will provide him with the following:

- Model of Tedder Serial number -
- 2. All references to left or right, apply to the machine as viewed from rear.
- 3. Parts should not be ordered from the illustration only. Use complete parts number and description, as shown in the parts lists.
- If the dealer has to order the part give the shipping instructions.
 VIA truck large pieces (Specify local delivery truck line)
 VIA United Parcel Service

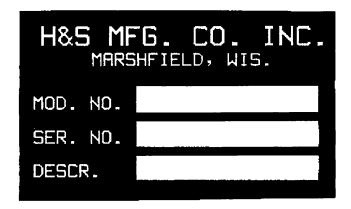


Record numbers in spaces provided above from the Serial Number tag off machine, as a handy record for quick reference.

ABOUT IMPROVEMENTS

H&S is continually striving to improve its products.

We must therefore, reserve the right to make improvements or changes when it becomes practical to do so, without incurring any obligation to make changes or additions to the equipment previously sold.

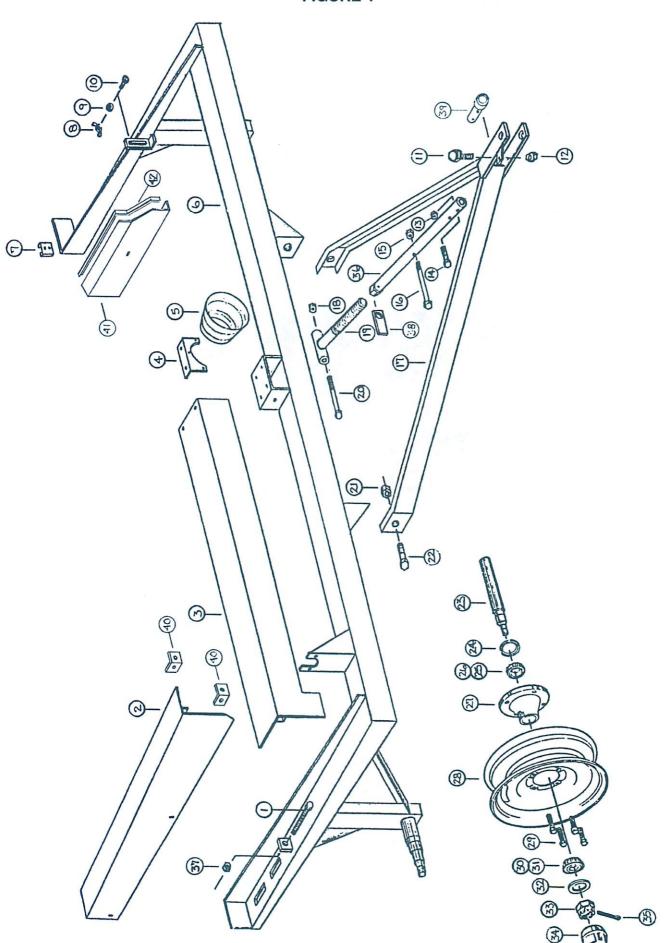

FRAME & SHIELDS

DESCRIPTION Tightener Bolt 1/2"x4-1/2"	" ¿L	9186 8 ،	M HTI .t
bleide Shield	u	OtT	2.
Front Shield	117T	ŀŀΤ	3.
Gear Box Shield	u	SIT	.₽
Gear Box Plastic Shield	u	T13	.3
Tedder Main Frame	417T	⊅ŀT	.9
SMV Holder	и	L 65	۲.
tuM gniW	ıs	21T	.8
1/4" Flat Washer	u	116	·6
Carriage Bolt 1/4"x3/3"	и	711	10.
PTO Holder	u	81T	11.
1/2" Lock Nut		118	12.
3/8" Lock Nut		₽ſA	13.
3/8" x 2" Bolt Grade 5	u	4117	14.
3/8" Lock Nut	u	ÞΙΑ	15.
3/8" x 6" Bolt	u	T20	16.
Pole for Tedder	··	T21	17.
1/2" Nut	u	62日	18.
Adjustment Screw	u	TSS	.61
1/2"x6-1/2" Bolt	u	66X	50.
3/4" Lock Nut	и	T23	51.
3/4"x2" Bolt	и	T24	25.
Spindle	u	T 25	.23.
Seal CR-14975	"	92T	24.
Bearing LM67048		72T	
Race LM67010		82T	.92
Hub	u u	42T	.72
miA	"	T30	.88
Hub Bolt		T31	.62
Bearing LM11949	"	T32	30.
Race LM11910	u	EET	31.
Washer	"	T34	32.
JuN 202 dul	"	36T	.53.
Hub Cap	æ	98T	34.
Cotter Pin	"	75T	.35.
Adjustment Pipe 1/2" Mut	66	7117	.96.
	65	R29	.75
Adjustment Lock	"	8117	.38.
Adjustment End Shaft	u	6117	.95
Shield Angle LH Side Shield	u	T120	40.
Plastic Edge For Shield	44	121T	.41. 42.
niowa ia i afina apani i	(let		
	(jej	00M '8 sA .ol	NOTE: " (Same Part N


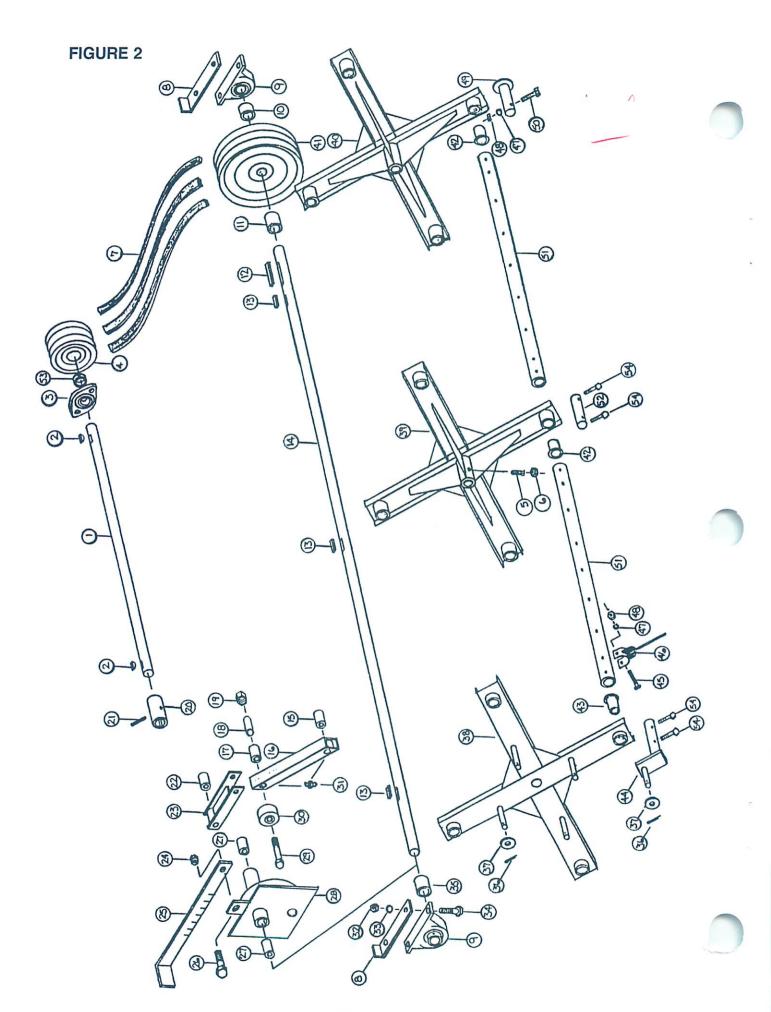


FIGURE 2					
CAM	AND	BELT	DRIVE	ASSE	VIBLY

CAM AND BELT DRIVE ASSEMBLY				
ITEM	8'	7'	DESCRIPTION	
1.	T39	T739	Front Shaft	
2.	5B10	"	1/4" x 1" Woodruff Key	
3.	T40	"	Bearing	
4.	T260	"	Pulley	
5.	T115	,,	Set Screw for Reel	
6. 7.	T116 T44	"	5/16" Nut V-Belt	
8.	T45	"	Tightener Brackets	
9.	T46	"	Bearing	
10.	T47	"	Spacer 1-3/8"	
11.	T48	"	Spacer 2-5/8"	
12.	T49	"	5/16" x 4" Sq. Key	
13.	T50	"	5/16" x 2" Sq. Key	
14.	T51	T751	Reel Shaft	
15.	T52	"	Bronze Bushing 3/4" I.D. (8)	
16.	T53	"	Cam Long Arm	
17.	T52	"	Bronze Bushing 3/4" I.D. (8)	
18.	T122	,,	Steel Bushing 5/8" I.D. (4)	
19.	T60	"	5/8" Lock Nut	
20.	T57	"	Gear Box Connector	
21.	3G22	"	Roll Pin 5/16" x 1-3/4"	
22. 23.	T58 T59	"	Bronze Bushing 3/4" I.D. (4) Cam Short Arm	
24.	T60	"	5/8" Lock Nut	
25.	T61	"	Cam Handle	
26.	T62	"	5/8" x 1-1/2" Bolt	
27.	T63	"	Bronze Bushing 1-3/8" I.D. (2)	
28.	T64	"	Cam Assembly	
29.	T65	"	5/8" x 4 Bolt	
30.	T66	,,	Cam Roller Bearing	
31.	T67	"	Grease Zerk (long)	
32.	T68	"	5/8" Nut	
33.	T69	,,	5/8" Lock Washer	
34.	T70	"	5/8" x 2 Bolt	
35.	T71	"	Spacer 1"	
36.	T72	"	Cotter Pin 5/32 x 1-1/2	
37. 38.	T73 T74	"	Washer LH Reel Cross	
39.	T75	,,	Center Reel Cross	
40.	T76	"	RH Reel Cross	
41.	T77	,,	Pulley	
42.	T78	"	Bronze Bushing 1-1/4" I.D. (8)	
43.	T79	"	Bronze Bushing 1-1/4" I.D. (4)	
44.	T80	"	LH Stub Shaft	
45.	T123	"	3/8" x 2-1/4" Bolt Grade 5	
46.	T82	"	Rubber Mounted Teeth	
47.	B68	"	3/8" Lock Washer	
48.	K60	"	3/8" Nut	
49.	T83	"	RH Stub Shaft	
50.	T19		3/8" x 2 Bolt Grade 5	
→ 51.	T84-9 T84-10	T784-8 T784-9	Reel Pipe	
52.	T85	"	Reel Pipe Center Stub Shaft	
53.	4C9	"	Lock Collar	
54.	T123	,,	3/8" x 2-1/4" Bolt Grade 5 (Thru Teeth)	
	T114	"	3/8" x 2" Bolt Grade 5 (Thru pipe)	

NOTE: " (Same Part No. As 8' Model)

FIGURE 3

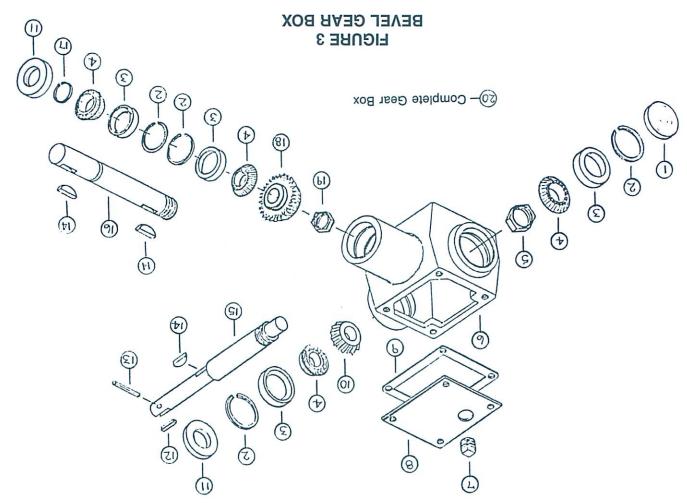

MODEL & PART NO.

	8, Model)	me Part No. As	NOTE: " (Sa
Complete Gear Box	"	T112	20.
łuN	"	364	.61
Gear 18T	"	9EX	18.
gniA qsn2	"	3621	.71
Gear Box Side Shaft	и	78T	.91
Gear Box Front Shaft	**	98T	15.
1/4x1 Woodruff Key	"	2B10	.41
5/16x1-3/4 Roll Pin	"	3622	13.
1/4x1-1/4 Square Key	"	2135	12.
Seal	44	3G9	.11.
Gear 12T	"	X3G2	.01
Gasket	u	362	.6
Cover	"	3G3	.8
Plug	"	3620	.7
gnisuoH	u	361	.9
JuN	u	3611	.5
Bearing #15101	"	367	.4.
Race #15245	"	3G18	3.
Snap Ring	"	3610	2.
Dust Cap	"	XS	٦.
DESCRIPTION	.2	,8	Mati

FIGURE 4 H&S HAY TEDDER PTO (2005 Model Year Only)

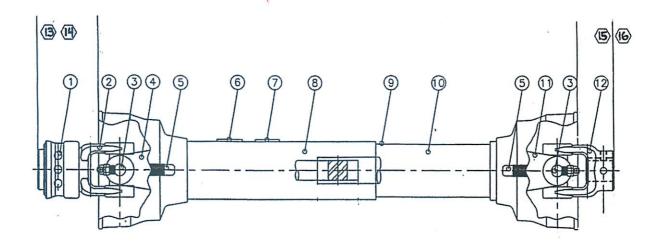


FIGURE 4

ITEM	PART NO.	DESCRIPTION	
1.	S225	Spring-Lok Repair Kit	
2.	S224	Spring-Lok Yoke Assembly	
3.	W-Kit	"W" Cross & Bearing Kit	
4.	T266	Yoke & Shaft	
5.	T267	Guard Repair Kit (Not Shown)	
6.	16SV283	Safety Sign	
7.	16SV384	Safety Sign-540 RPM	
8.	T268	Outer Guard	
9.	T269	Inner Guard	
10.	16SV388	Safety Sign (Not Shown)	
11.	T270	Yoke & Tube	
12.	T271	Yoke	
13.	T262	Joint & Shaft Half Assembly w/Guard	
14.	T263	Joint & Shaft Half Assembly	
15.	T264	Joint & Tube Half Assembly w/Guard	
16.	T265	Joint & Tube Half Assembly	
17.	T272	Complete PTO	

PTO T280 TRACTOR
Complete T280 TRACTOR
Machine
Machine
T273
T282

FIGURE 5 H&S HAY TEDDER PTO (2006 Model Year and After)

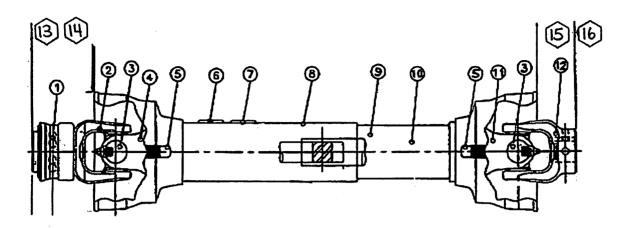


FIGURE 5

ITEM	PART NO.	DESCRIPTION
1.	S225	Spring-Lok Repair Kit
2.	S379	Spring-Lok Yoke Assembly
3.	T274	12P Cross & Bearing Kit
4.	T275	Yoke & Shaft
5.	S206	Guard Repair Kit (Not Shown)
6.	16SV283	Safety Sign
7.	16SV384	Safety Sign (540 RPM)
8.	T276	Outer Guard
9.	T277	Inner Guard
10.	16SV388	Safety Sign (Not Shown)
11.	T278	Yoke & Tube
12.	T279	Yoke
13.	T280	Joint & Shaft Half Assembly w/Guard
14.	T281	Joint & Shaft Half Assembly
15.	T282	Joint & Tube Half Assembly w/Guard
16.	T283	Joint & Tube Half Assembly
17.	T273	PTO Assembly Complete

H&S 7' & 8' HAY TEDDER

Your new H&S Hay Tedder has been manufactured of the finest quality materials and components. The performance you get from your machine is largely dependent upon how well you read and understand this manual and apply this knowledge. There is a right and a wrong way to do everything. Please do not assume that you know how to operate and maintain your Haymachine before reading this manual carefully. Keep this manual available for ready reference.

H&S 7' & 8' HAY TEDDER SPECIFICATIONS

DESCRIPTION	7 FT.	8 FT.	
Drive	540 RPM PTO	540 RPM PTO	
Tedding Width	7 ft	8 ft.	
Overall Transport Width	10'2"	11'2"	
Weight	870 #	900 #	
Overall Height	50-1/2"	50-1/2"	
Overall Length, w/Hitch	112"	112"	
No. of Rubber Mounted Teeth	56	64	•

H&S MANUFACTURING CO. INC.

2608 S. Hume Ave. P.O. Box 768 - Telephone (715) 387-3414 FAX (715) 384-5463 MARSHFIELD, WI 54449



H&S WAREHOUSE Rt. #5 and 76 P.O. Box 1260 – Telephone (716) 736-7595 FAX (716) 736-7596 RIPLEY, NY 14775

H&S MFG. CO.

products approved

for the

FEMA SEAL OF QUALITY

