Instructions for Ordering Parts

All service parts should be ordered through your H & S dealer. He will be able to give you faster service if you will provide him with the following:

- 1. Model of Tedder Serial number -
- 2. All references to left or right, apply to the machine as viewed from rear.
- 3. Parts should not be ordered from the illustration only. Use complete parts number and description, as shown in the parts lists.
- 4. If the dealer has to order the part give the shipping instructions.

 VIA truck large pieces (Specify local delivery truck line)

 VIA United Parcel Service



Record numbers in spaces provided above from the Serial Number tag off machine, as a handy record for quick reference.

ABOUT IMPROVEMENTS

H & S is continually striving to improve its products.

We must therefore, reserve the right to make improvements or changes when it becomes practical to do so, without incurring any obligation to make changes or additions to the equipment previously sold.

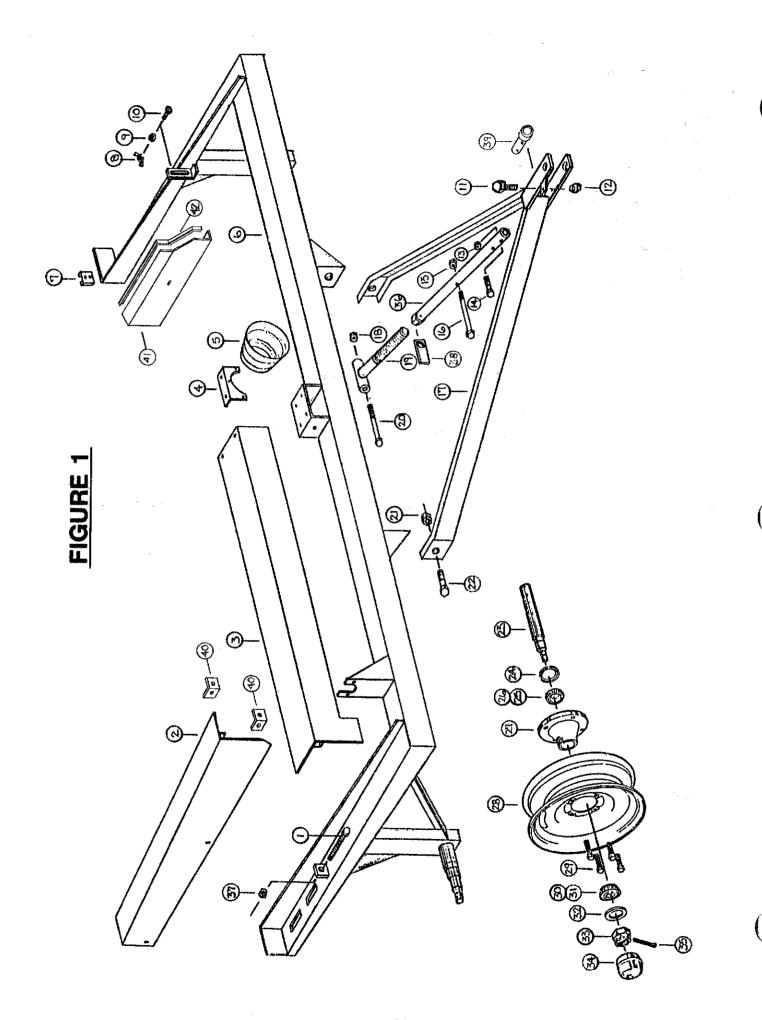


FIGURE 1
FRAME AND SHIELDS

MODEL & PART NO.

	MODEL	O PARI	NO.
ITEM	8'	7'	DESCRIPTION
1	9S16	"	Tightener Bolt 1/2 x 4-1/2
2	T10	"	Side Shield
3	T11	T711	Front Shield
4	T12	17	Gear Box Shield
5	T13	"	Gear Box Plastic Shield
6	T14	T714	Tedder Main Frame
7	F97	11	SMV Holder
8	T15	"	Wing Nut
9	T16	"	¼" Flat Washer
10	T17	17	Carriage Bolt 1/4 x 3/4
11	, _{≖≖} T18	1)	PTO Holder
12	"_ R11	11	½" Lock Nut
13	A14	,,	3/8" Lock Nut
14	T114	"	3/8 x 2 Bolt Grade 5
15	A14	"	3/8" Lock Nut
16	T20	17	3/8 x 6 Bolt
17	T21	11	Pole for Tedder
18	R29	11	½" Nut
19	T22	,,	Adjustment Screw
20	X99	11	½ x 6-½ Boit
21	T23	"	¾" Lock Nut
22	T24	11	3/4 x 2 Bolt
23	T25	11	Spindle
24	T26))	Seal CR-14975
25	T27	"	Bearing LM67048
26	T28	71	Race LM67010
27	T29	"	Hub
28	T30	11	Rim
29	T31	"	Hub Bolt
30	T32	"	Bearing LM11949
31	T33	**	Race LM11910
32	T34	"	Washer
33	T35	"	Nut
34	T36	11	Hub Cap
35	T37	"	Cotter Pin
36	T117	,,	Adjustment Pipe
37	R29	"	½" Nut
38	T118	,,	Adjustment Lock
39	T119	"	Adjustment End Shaft
40	T120	11	Shield Angle
41	T121	"	LH Side Shield
42	T124	"	Plastic Edge For Shield
I Am	1147		r mane Luge For Siliela

NOTE: " (Same Part No. As 8' Model)


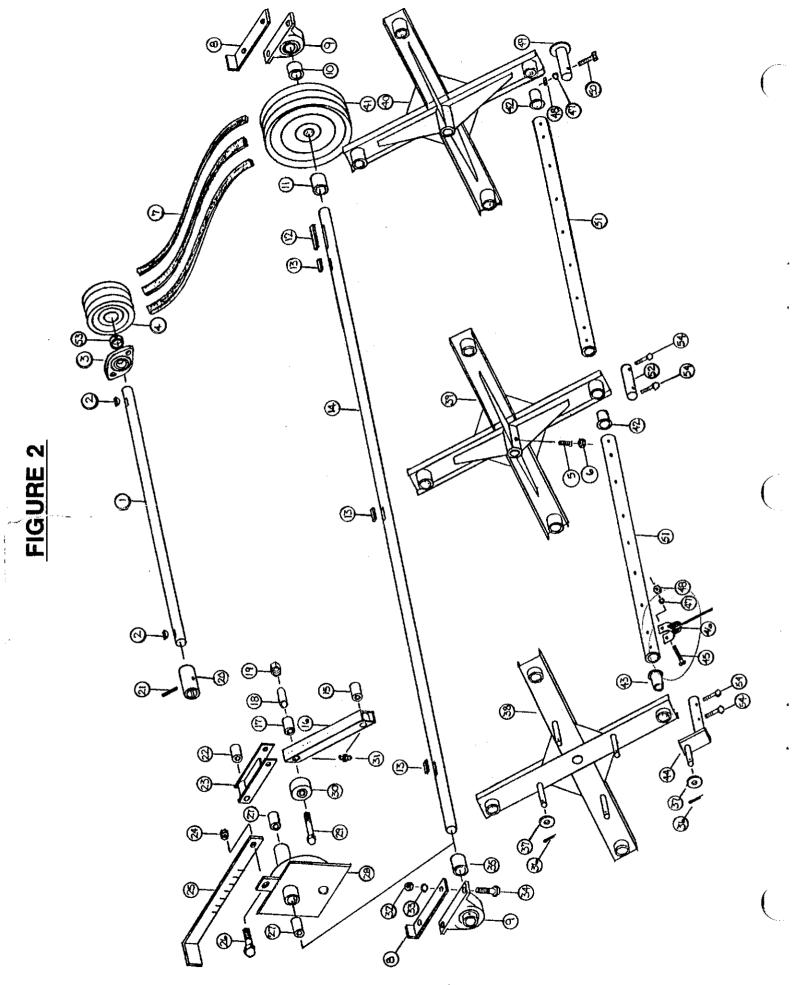


FIGURE 2 CAM AND BELT DRIVE ASSEMBLY

		C	AM AND B	SELT DRIVE ASSEMBLY	
	ITEM	8'	7'	DESCRIPTION	
	1	T39	T739	Front Shaft	
	2	5B10	46	1/4 x 1 Woodruff Key	
	3	T40	ţſ	Bearing	
	4	T260	ĸ	Pulley	
	5	T115	46	Set Screw for Reel	
	6	T116	tt.	5/16" Nut	
	7	T44	66	V-Belt	
	8	T45	tt.	Tightener Brackets	
	9	T46	66	Bearing	
	10	T47	"	Spacer 1-3/8"	
	11	T48	"	Spacer 2-5/8"	
	12	T49	"	5/16 x 4 Sq. Key	
	13	T50	"	5/16 x 2 Sq. Key	
	14	T51	T751	Reel Shaft	
	15	T52	"	Bronze Bushing 3/4" I.D.	
	16	T53	cc .	Cam Long Arm	
	17	T52	æ	Bronze Bushing 3/4" I.D.	
	18	T122	44	Steel Bushing 5/8" I.D.	
			"	5/8" Lock Nut	٠.
	19	T60	rc .		
	20	T57	cc c	Gear Box Connector	
	21	3G22	cc	Roll Pin 5/16 x 1-3/4	
	22	T58		Bronze Bushing 3/4" I.D.	
	23	T59	"	Cam Short Arm	
	24	T60	"	5/8" Lock Nut	
	25	T61		Cam Handle	
	26	T62		5/8 x 1-1/2 Bolt	
	27	T63	tt.	Bronze Bushing 1-3/8" I.D.	
	28	T64	tt	Cam Assembly	
	29	T65	££	5/8 x 4 Bolt	
	30	T66	ű	Cam Roller Bearing	
	31	T67		Grease Zerk (long)	
	32	T68	ce	5/8" Nut	
	33	T69	EE	5/8" Lock Washer	
	34	T70	66	5/8 x 2 Bolt	
	35	T71	Ef	Spacer 1"	
	36	T72	££	Cotter Pin 5/32 x 1-1/2	
	37	T73	α.	Washer	
	38	T74	ß	LH Reel Cross	
	39	T75	cc .	Center Reel Cross	
	40	T76	ce	RH Reel Cross	
	41	T77	cc	Pulley	
	42	T78	ce .	Bronze Bushing 1-1/4" I.D.	
	43	T79	C6	Bronze Bushing 1-1/4" I.D.	
	44	T80	E6	LH Stub Shaft	
	45	T123	66	3/8 x 2-1/4 Bolt Grade 5	
	46	T82	ce .	Rubber Mounted Teeth	
	47	B68	66	3/8" Lock Washer	
	48	K60	E#	3/8" Nut	
	49	T83	a	RH Stub Shaft	
tf	50	T19	cc		-
15th - 1.74	_ 1 51	T84	(T79A)	3/8" x 2 Bolt Grade 5 Reel Pipe	
9F+ (+) 474-) 51 52 5	T85	1104	Center Stub Shaft	
-	53		u	Lock Collar	
		4C9	ű		
	54	T123	Œ	3/8 x 2-1/4 Bolt Grade 5 (Thru Teeth)	
	NIOTE: # 1	T114	#N= ^!	3/8 x 2 Bolt Grade 5 (Thru pipe)	
	NOTE: " (oame Par	t No. As 8'	woder)	

17

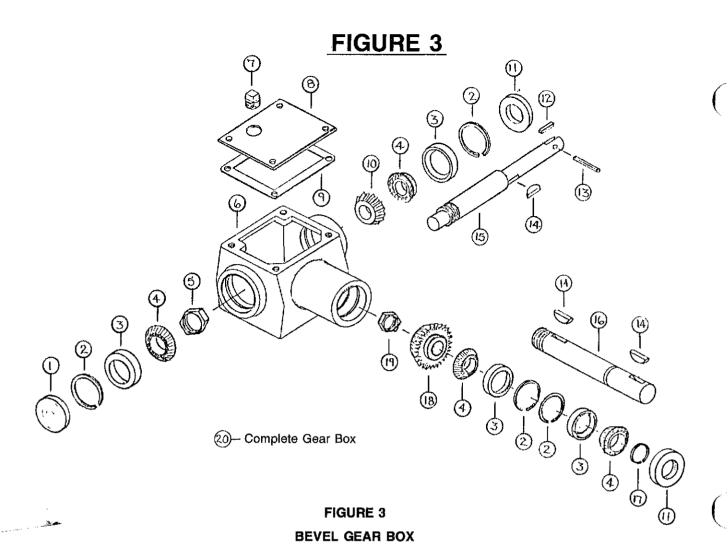

MODEL & PART NO.

ITEM	8'	7'	DESCRIPTION
1	X2	",	Dust Cap
2	3G19	"	Snap Ring
3	3G18	19	Race #15245
4	3 G 7	17	Bearing #15101
5	3G11	11	Nut
6	3 G 1	"	Housing
7	3G20	77	Plug
8	3G3	"	Cover
9	3G2	"	Gasket
10	X3G5	17	Gear 12T
11	3G9	17	Seal
12	S135	11	¼ x 1-¼ Sq. Key
13	3G22	11	5/16 x 1-3/4 Roll Pin
14	5B10	**	1/4 x 1 Woodruff Key
15	T86	**	Gear Box Front Shaft
16	T87	37	Gear Box Side Shaft
17	3G21	,,	Snap Ring
18	X36	17	Gear 18T
19 ,	3G4	11	Nut
20	T112	11	Complete Gear Box

NOTE: " (Same Part No. As 8' Model)

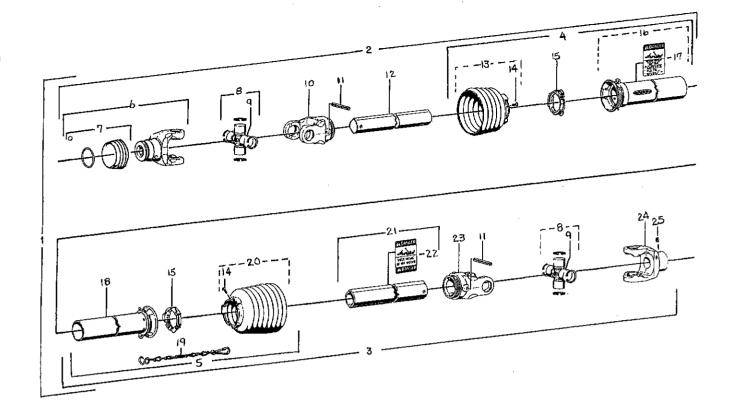


FIGURE 4 PTO PARTS

ITEM	PART NO.	DESCRIPTION
1	T256	PTO Assembly Complete
2	T257 ื	Tractor Half PTO
3	T90	Machine Half PTO
4	T91	Tractor Half Shield
5	T92	Machine Half Shield
6	T258	End Yoke Tractor Half
7	T259	Collar Kit
8	T95	Cross and Bearing Kit
9	T96	Grease Zerk
10	T97	Inboard Yoke - Tractor Half
11	T98	Roll Pin
12	T99	Inner Profile
13	T100	Shield Cone
14	T101	Screw
15	T102	Bearing Ring
16	T103	Outer Shield Tube w/Cap
17	T104	Danger Decal - Shield
18	T105	Inner Shield Tube w/Cap
19	T106	Safety Chain
20	T107	Shield Cone
21	T108	Outer Profile
22	T109	Danger Decal Steel
23	T110	Inboard Yoke - Machine Half
24	T111	End Yoke - Machine Half
25 .	X73	3/8-16 Serscrew

~SERVICE NOTES~

<u> </u>
•
 •